
STUDIO • M


PRODUCT NAME: Frequency ITEM NUMBER: SM23636

Please consult your electrician for hanging fixture and wiring.

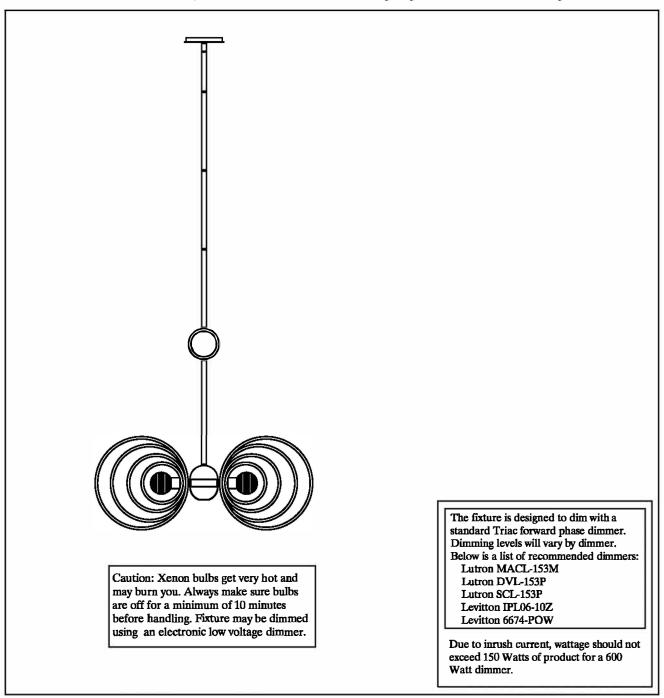



Bulb(included): 6 x G9 LED 2.9W + 1 x MR11 4W

IMPORTANT: Tum off the power at the main fuse of circuit breaker box before starting installation

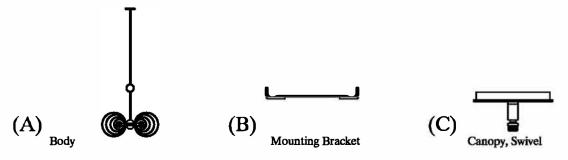

Locate all hardware & components before discarding packaging

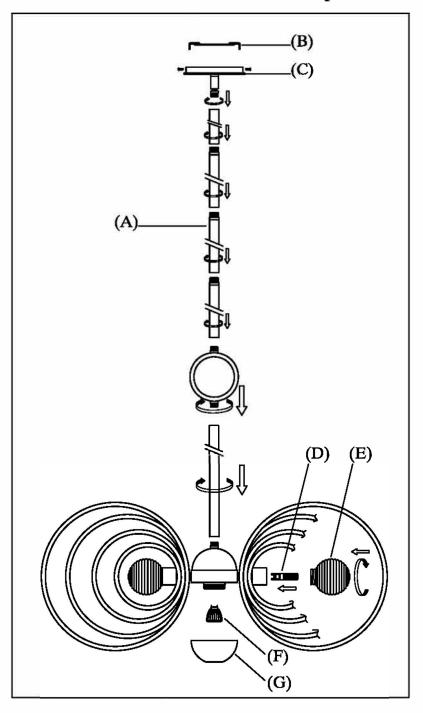


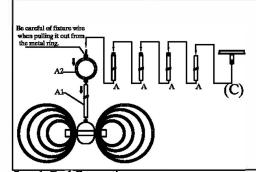

Step 1: Rod Connections:

1.)

- a. Secure rod (A1) and the metal ring (A2) onto the fixture. Carefully feed wire from bottom and pull through top of the ring (A2). Turn ring (A2) the opposite direction of threading onto pipe so to not twist wire.
- b. Run wire through the stems (A) and combine stem lengths to desired mounting height.
- c. Run wire through canopy (C) and connect stems (A) to swivel.

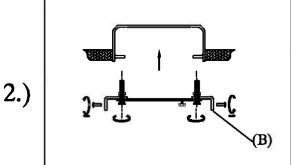


step2:Attach the mounting bracket to the outlet box by using two mounting screws.


Cleaning & Care:


Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.

IMPORTANT:Tum off the power at the main fuse of circuit breaker box before starting installation

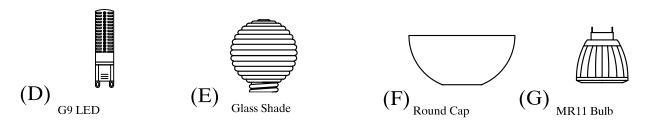


Locate all hardware & components before discarding packaging

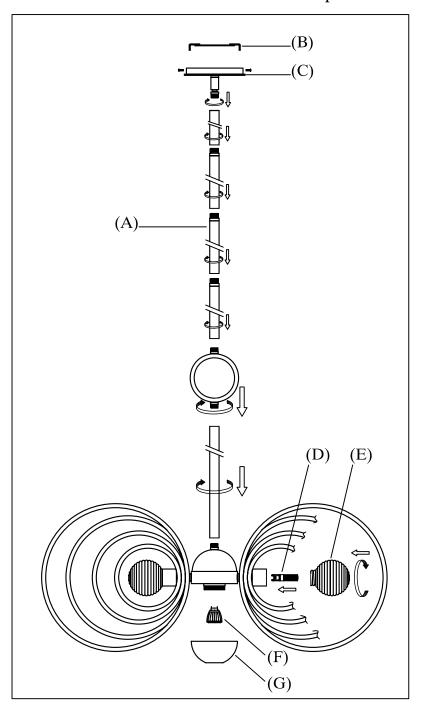


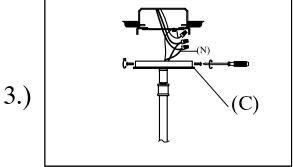

Step 3: Wire fixture to wires found in the electrical box. Install copper wire to mounting screw. Install fixture to mounting bracket, and tighten screws on the sides of the canopy to secure.

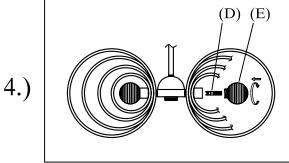

step4:Fix G9 LED bulb and attach the glass on socket.

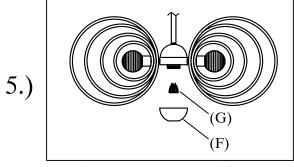

step5:Fix MR11 bulb on socket, and finally, secure the round cap tightly.

Cleaning & Care:

Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.