

STUDIO•M

SM369821

Please consult your electrician for hanging fixture and wiring.

INSTALLATION INSTRUCTIONS

PLEASE READ CAREFULLY AND SAVE THESE INSTRUCTIONS, AS YOU MAY NEED THEM AT LATER DATE.

CAUTION - Turn off the main power at the circuit breaker before installing The fixture, in order to prevent possible shock.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instruction.

FOR CEILING MOUNT

1. A) Place the #8-32 HEX NUTS (3) onto the #8-32 FIXTURE MOUNTING SCREWS (4) and attach the FIXTURE MOUNTING SCREWS to the MOUNTING BRACKET (2), or Universal mounting plate (whichever is provided). Do not tighten the HEX NUTS at this time.
2. Pull the power supply wires out from the OUTLET BOX (1), and mount the MOUNTING BRACKET (2) or the universal mounting plate to the OUTLET BOX, using MOUNTING SCREWS (10).
3. Attach the power supply wires to the fixture load wires by connecting BLACK to BLACK (6), and WHITE to WHITE (5). Attach the POWER SUPPLY GROUND WIRE (7) from the OUTLET BOX (1) and the FIXTURE GROUND WIRE (8) from the fixture to the GREEN GROUND SCREW (9) on the MOUNTING BRACKET (2) or connect both wires together using the correct size of wire connectors.
4. Placing the CANOPY (11) on the fixture over the OUTLET BOX (1) and onto the fixture mounting screws (4), and adjust the #5-32 fixture mounting screws until they protrude out from the CANOPY 1/4 . Remove the CANOPY and secure the position of the fixture mounting screws by tightening the HEX NUT(S) (3) against the MOUNTING BRACKET (2). Place the CANOPY back onto the fixture mounting screws and secure into place using the DECORATIVE NUTS (12) provided.
5. Screw in light bulbs that do not exceed the maximum wattage specified on the fixture's wattage rating label into the socket(s) on the fixture.

INSTALLATION COMPLETED

STUDIO•M

SM369821

Please consult your electrician for hanging fixture and wiring.

