

STUDIO•M

SM26681

Please consult your electrician for hanging fixture and wiring.

1. Pull the power supply wires out from the outlet box (A), and mount the mounting bracket (B) to the outlet box (A), using mounting screws (D)
2. Screw the screws (H) into the mounting bracket (B) and adjust the screws until the screw head can out from the ceiling pan (E).
3. Attach the power supply wires to the fixture load wires by connecting BLACK to BLACK, and WHITE to WHITE. Attach the POWER SUPPLY GROUND WIRE from the outlet box (A) and the FIXTURE GROUND WIRE from the fixture to the GREEN GROUND SCREW (C) on the mounting bracket (B) or connect both wires together using the correct size of wire connectors.
4. Placing the ceiling pan (E) with keyhole slots on the fixture over the outlet box (A) and the head of the screw (H) will pass through the large end of the keyhole slot. The ceiling pan (E) must then be turned slightly so that screw (H) head is over the smaller part of the opening of the keyhole slot. Tighten screws (H) once ceiling pan is in place.
5. Install light bulbs (not provided).
6. Pull the moveable hook for outside, put the glass shade (I) onto the groove for the unmoveable hook (F) then release the moveable hook (G) to fixed the glass shade (I).

Please consult a qualified Electrician if you are not familiar with electrical wiring.

